




## Dutton Lainson B2500 / B3500 / FLOE Installation Guide

## \* DANGER - CAUTION \* Always Lower The Boat Lift Before Attempting Assembly.

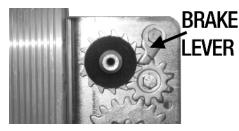

- 1. Lower the Boat Lift.
- 2. Remove the Wheel.
- 3. Remove the Tin Cover.
- 4. Remove the Brake Lever.

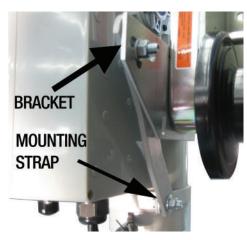

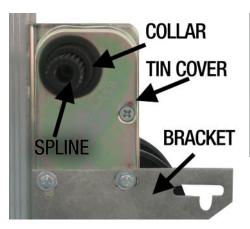



7. Image Above Shows Bolt Pattern.

 5. Replace Tin Cover Screws with Bolts Provided in the Kit. Install Aluminum Bracket as Shown.
6. Install Spline and Collar as Shown.

8. Install Mounting Strap and Bolts to Bracket as Shown in the Image on the Left.



9. Tighten the Motor Bolt to Approximately 70 Foot Pounds.

If Winch is Mounted with the Cable Drum at the Top, Refer to the Additional Photos Below.



In Case of a Power Outage This Tool May be Used to Raise or Lower Your Lift. First Remove Rubber Cap From the Motor Shaft.

Recommended Extension Cords up to 150 feet 12/3. Any question regarding electrical current requirements please call your Authorized Dealer or Lift Tech Marine 1-866-319-8877.

## \* DANGER - CAUTION \*

All Power Used on Your Dock or Lift Needs to be GFI Protected at the Shoreline.

