
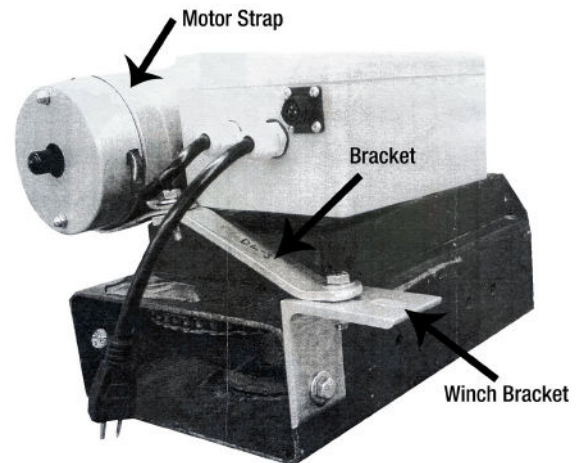


High and Dry Installation Guide


*** DANGER - CAUTION ***

Always Lower The Boat Lift Before Attempting Assembly.

1. Lower the Boat Lift.
2. Remove the Wheel. Spins Off Counter Clockwise.
3. Remove the Two Bolts on the Front Cover.
4. Remove the Brake Lever.
5. If you have a Brass Washer Remove it.
6. Install the Fiber Disc Over the Shaft. Put Cover Back On.
7. Install the Spline on the Shaft. Install Both Spacer Collars on the Spline. Install the Winch Bracket.
8. Slide Motor Onto Shaft.
9. Install the Motor Strap and Bracket as Shown. Install Bracket to Winch Bracket.
10. Install the Bolt & Washer onto the Motor and Tighten to Approximately 70 Foot Pounds.

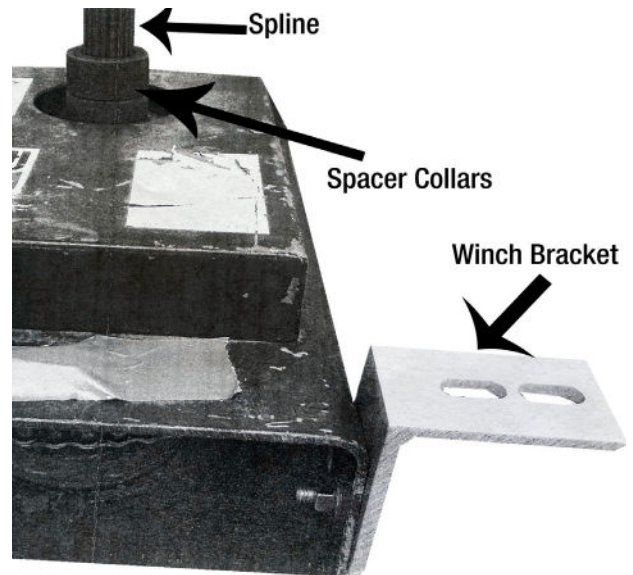

In Case of a Power Outage
This Tool May be Inserted
Into a Drill to Raise or Lower
Your Lift. First Remove
Rubber Cap From Motor
Shaft.

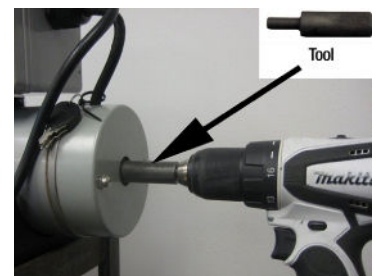

Recommended Extension Cords up to 150 feet 12/3.

Any Question Regarding Electrical Current Requirements Please Call Your Authorized Dealer or Lift Tech Marine 1-866-319-8877. WWW.LIFTTECHMARINE.COM

*** DANGER - CAUTION ***

All Power Used on Your Dock or Lift Needs to be GFI Protected at the Shoreline.