
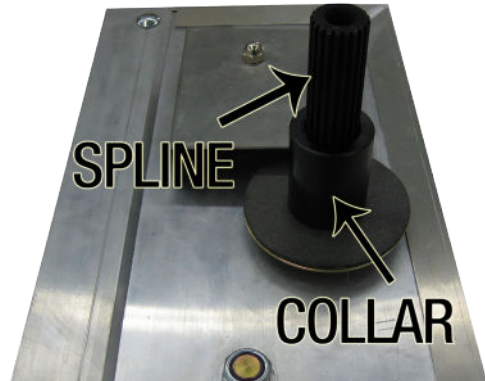


ShoreMate Installation Guide


*** DANGER - CAUTION ***

Always Lower The Boat Lift Before Attempting Assembly.

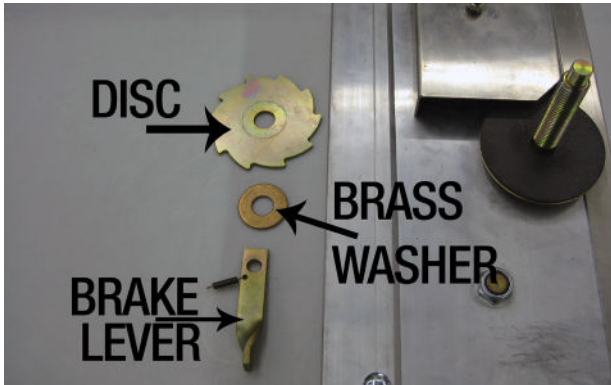

1. Lower the Boat Lift.
2. Remove the Wheel.
3. Remove the Brake Dog, Brass Washer & the Brake Lever. You Will Not be Using Them Any Longer.


4. Install the Spline and Collar as Shown.
5. Slide the Motor Down onto the Spline.

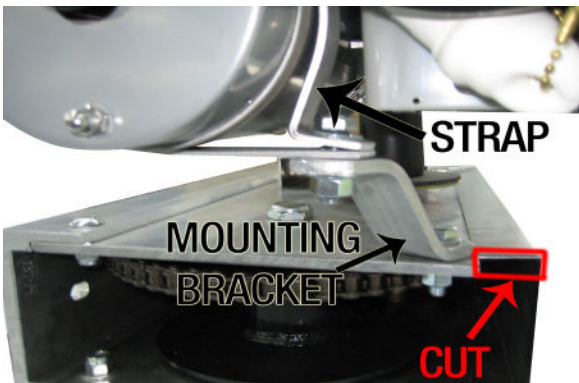

6. Install the Strap and Mounting Bracket as Shown.
7. Cut Tin Cover if Needed.

8. Install the Black Bolt & Washer onto the Motor and Tighten to Approximately 70 Foot Pounds.

In Case of a Power Outage This Tool May be Inserted Into a Drill to Raise or Lower Your Lift. First Remove Rubber Cap From the Motor Shaft.

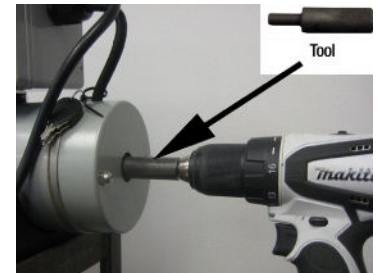

Recommended Extension Cords up to 150 feet 12/3.

Any Question Regarding Electrical Current Requirements Please Call Your Authorized Dealer or Lift Tech Marine 1-866-319-8877. WWW.LIFTTECHMARINE.COM

*** DANGER - CAUTION ***

All Power Used on Your Dock or Lift Needs to be GFI Protected at the Shoreline.